

 
Koldfront

PAC901W Portable Air Conditioner Owner's Manual

This owner's manual provides instructions on safe installation, use, and maintenance. Please read it carefully and save it for reference.

Koldfront

EdgeStar Products
Box 81336
Austin, Texas 78708-1336
Toll Free : 1-866-319-5473

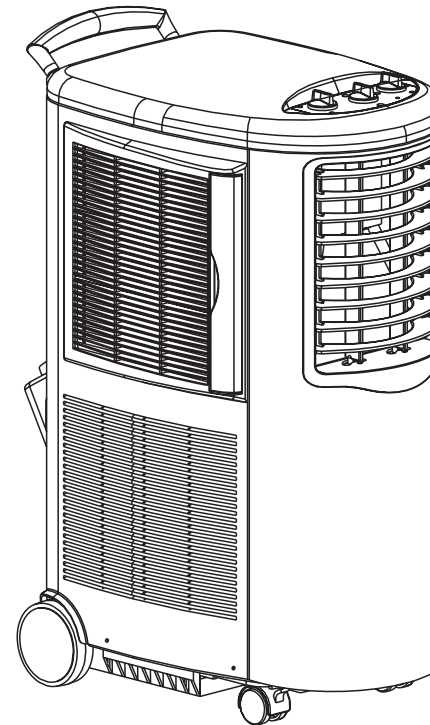

1-866-319-5473. Please have your order receipt available to confirm the date of purchase. Once an EdgeStar Products authorized representative has confirmed that your product is eligible for warranty service, the product must be returned to an EdgeStar Products authorized repair facility.

The purchaser is solely responsible for prepaying all shipping related costs to and from the repair facility.

EdgeStar Products is not responsible for damage resulting from shipper mishandling or improper packaging.

Do not return defective product to the place of purchase.

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS DISTRIBUTORS SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE, INCLUDING WITHOUT LIMITATION, LOST REVENUES OR PROFITS, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. SOME STATES DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

NOTE: PLACE THE UNIT IN AN UPRIGHT POSITION FOR A MINIMUM OF TWO HOURS BEFORE OPERATING IT.

Read all instructions before using this air conditioner

Important Safety Instructions

For your safety

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this appliance or any other appliance, Read product labels for flammability or other warnings.

Prevent accidents

- To reduce the risk of fire, electrical shock, or injury to persons when using your air conditioner, follow basic precautions, including the following:
- Be sure your electrical circuit is adequate for the model you have chosen. This information can be found on the rating label, which is located on the rear of the unit.
- Be sure the air conditioner has been securely and correctly installed according to the installation instructions provided with this manual. Save this manual for future reference.

Electrical information

- The complete electrical rating of your new room air conditioner is stated on the rating label. Refer to the rating when checking the electrical requirements.
- Be sure the air conditioner is properly grounded. To minimize shock and fire hazards, proper grounding is important. The power cord is equipped with a LCDI grounding plug for protection against shock hazard.
- Your air conditioner must be used in a properly grounded wall receptacle. If the wall receptacle you intend to use is not adequately grounded or protected by a time delay fuse or circuit breaker, have a qualified electrician install the proper receptacle.
- If the power supply cord is damaged, it must be replaced by the manufacturer, service agent or a similarly qualified person in order to avoid a hazard.
- We do not recommend the use of an extension cord with this air conditioner.
- We recommend this appliance be run on a dedicated circuit.

WARNING

Electrical Shock Hazard

- Only plug unit into a grounded electrical outlet.
- Do not operate unit with any of the cabinet removed.
- Do not modify the power supply cord plug. If it does not fit outlet, have a proper outlet installed by a qualified electrician.

- Do not ground to a gas line.
- Do not have a fuse in the neutral or grounding circuit. A fuse in the neutral or grounding circuit could result in an electrical shock.

Failure to follow the above precautions could result in electrical shock, fire or personal injury.

General suggestions

- Make sure the air conditioner has adequate ventilation (about 24 ") around it to ensure proper airflow into the room and proper heat exhaustion.
- Different rooms have different heat loads. Try to make sure that your air conditioner is the appropriate power for the heat load in your room.
- Close the fireplace damper floor and wall registers so cool air does not escape up the chimney and into the duct work.
- Clean the air filter as recommended in the section "Care and Cleaning".
- Hot air with a warm mist of water will be expelled out the exhaust hose- we suggest exhausting this portable air conditioner out a window or door, but make sure the environment into which the air is exhausted can adequately handle the hot air and warm mist.

Limited Warranty

This Koldfront product is warranted to be free from defective workmanship and materials for the first year following the date of original purchase. Replacement parts will be supplied free of charge for the first year following the date of original purchase. Labor will be performed free of charge for the first 90 days following the date of original purchase.

WHAT IS COVERED:

This warranty applies to the original purchaser only, and only covers defects in workmanship experienced during operation of the product under normal service, maintenance, and usage conditions. This warranty applies to the purchase and use of this product in residential settings within the United States of America.

WHAT IS NOT COVERED:

The following limitations apply to the coverage of this warranty:

Optional accessories, attachments, and appearance items are excluded from warranty coverage, as is shipping damage, and any damage caused by improper voltage or any other misuse, including abnormal service, handling, or usage.

This warranty does not cover normal wear and tear on parts or replacement of parts designed to be replaced, e.g. filters, etc.

This warranty does not cover service trips to deliver, pick-up, repair, or install the product, or to instruct in proper usage of the product.

Damages or operating problems resulting from abuse, operation outside environmental specifications, uses contrary to instructions provided in the owner's manual, accidents, vermin, fire, flood, improper installation, unauthorized service, acts of God, unauthorized installation or modification, or commercial use are excluded from warranty coverage.

This warranty does not cover labor incurred 91 days or more after the date of original purchase.

This warranty does not cover use of Koldfront products in commercial settings.

DESCRIPTION OF WARRANTY SERVICE:

All defective product components covered by this warranty will be repaired or replaced, at [EdgeStar Products'](#) option, free of charge on a mail-in basis to [EdgeStar Products'](#) authorized repair facility during the first 90 days from the date of original purchase.

 
All defective product components covered by this warranty will be repaired or replaced, at [EdgeStar Products'](#) option, on a mail-in basis to [EdgeStar Products'](#) authorized repair facility during the time period beginning on the 91st day from the date of original purchase and ending one year from the date of original purchase. During this time period, parts will be supplied free of charge, but labor charges will apply.

All replacement parts and units will be new, remanufactured, or refurbished.

All products and components replaced by [EdgeStar Products](#) under warranty service become the property of [EdgeStar Products](#).

OBTAINING WARRANTY SERVICE:

Contact [EdgeStar Products](#) for troubleshooting assistance and warranty service authorization at

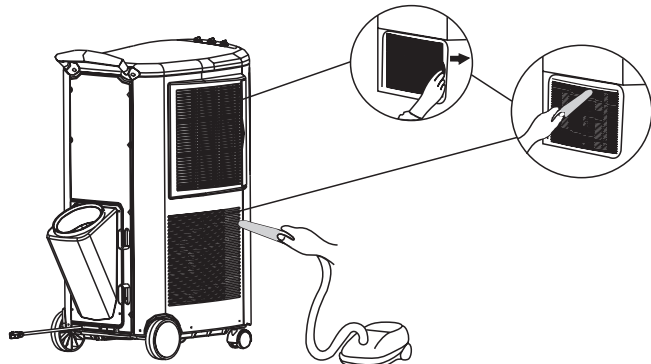

Storage:

1. Remove water from the unit via the drain port.
2. Cover the unit with plastic or return it to the original carton.

Note: To prevent rust or electrical connections from being damaged, store the air conditioner in an upright position and dry place.

Troubleshooting

Normal sounds:

Sound of rushing air:

At the front of the unit, you may hear the sound of rushing air being moved by the fan. Repositioning the louvers may improve this noise.

Thermostat clicking sound:

As cooling system cycles on and off, you may hear a "clicking" sound.

Gurgle /Hiss

"Gurgling or hissing" noise may be heard due to refrigerant passing through evaporation during normal operation.

Ping or swishing:

Droplets of water hitting condenser during normal operation may cause pinging or swing sounds.

Vibration:

Unit may vibrate and make noise because of poor floor or incorrect installation. Making sure the unit is level will minimize vibration.

High pitched chatter:

Today's high efficient compressors may have a high pitched chatter during the cooling cycle.

Problem noises/issues

Loud rattling noises coming from the fan

Possible shipping damage or other damage to the unit. Please contact customer service at 866-319-5473.

Evaporator freezing up

The unit may not be powerful enough for the heat load in your room. Try the unit in a smaller/cooler room.

Unit not cooling enough

The unit may not be powerful enough for the heat load in your room. Try the unit in a smaller/cooler room.

 
Unit will not turn on

Check the LCDI plug and hit the Reset button.



Any other problems

Please contact customer service at 866-319-5473.

Parts and components

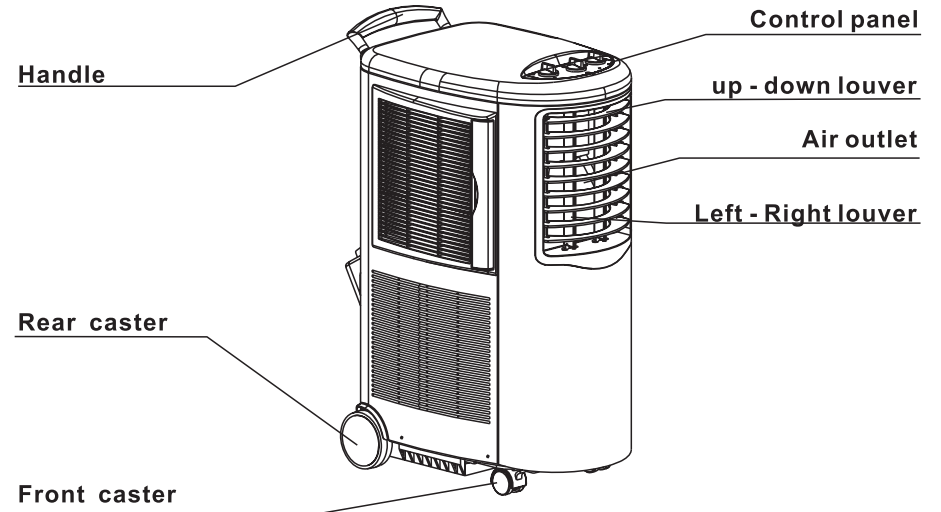


Exhaust hose

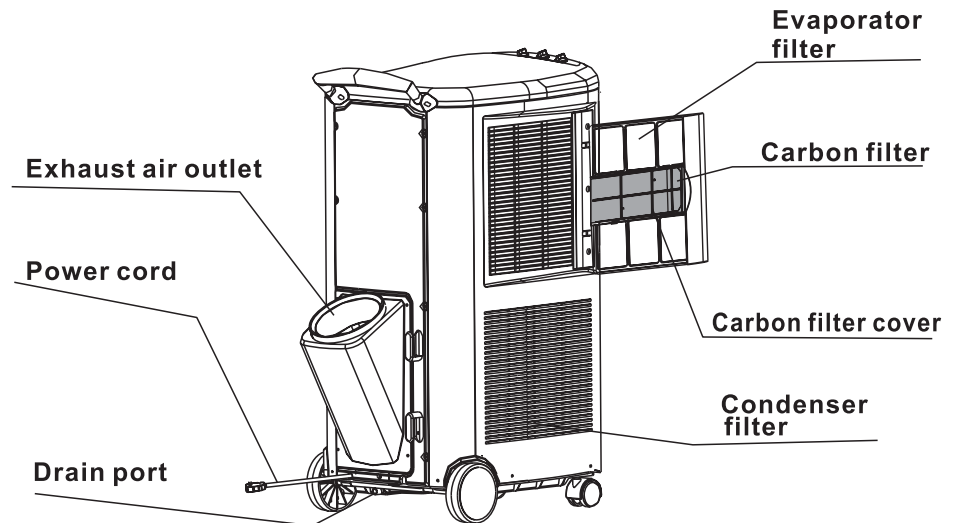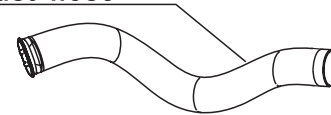  


Installation and use

How to install the exhaust hose

 Step 1. Connect the hose to the exhaust air outlet.

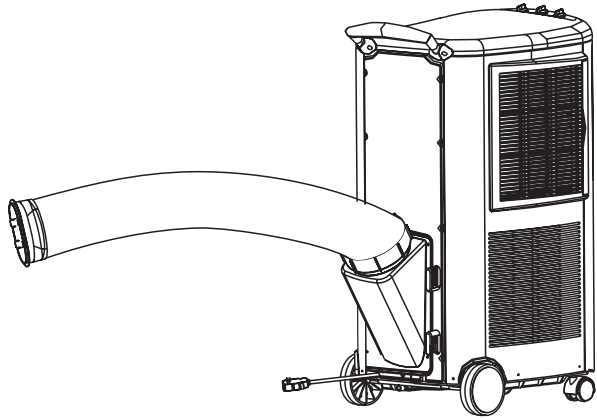

 Step 2. Place the exhaust hose discharge outlet through the window, utilizing the window vent kit, if needed.

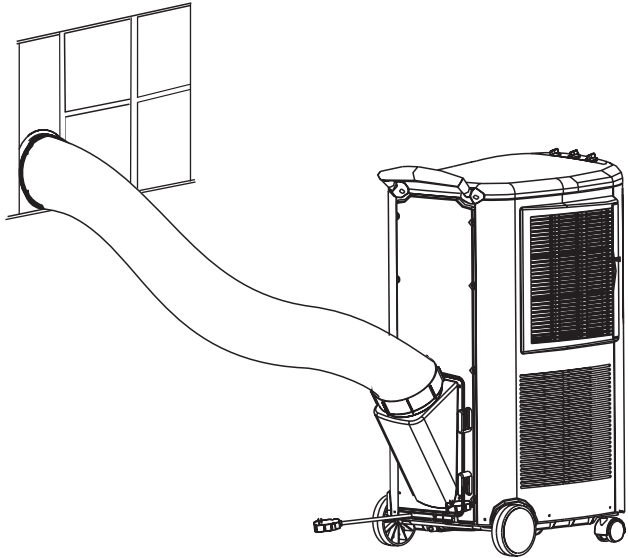


Operating instructions

To begin operating the air conditioner, follow these steps:

1. Plug in the air conditioner.
2. Install the exhaust hose and make sure the air is venting to an appropriate location.
3. Select the desired settings on the control panel. For a quick start, turn the Timer dial to CONT.- this will turn the air conditioner on.
4. Adjust the louvers for comfortable air flow.

Note: If the air conditioner is turned off, wait 3 minutes before restarting. This allows pressure inside the compressor to equalize. Failure to follow these instructions may cause inefficient operation.

 Control panel

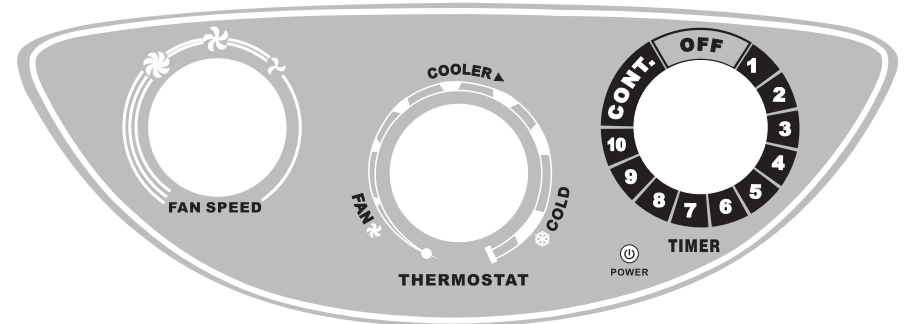

Control panel functions

TIMER : Turn the timer dial to the "CONT." position for continuous (uninterrupted) operation. Alternatively, turn the timer dial the desired time (from 1 to 10 hours) and the unit will run for that amount of time before shutting off.

FAN SPEED : Turn the dial to the desired fan speed- the fastest fan speed is on the left; the slowest fan speed is on the right.

THERMOSTAT : Turn the dial to the desired cooling power- the coldest setting is on the far right.

Maintenance

- Turn the unit OFF and remove the plug from the outlet.
 - Grasp the handle of filter and pull it out, removing it from the condenser and evaporator. Inspect the filter for cleanliness. You may clean it with a vacuum cleaner hose attachment or replace the filter if it is dirty.
 - It is a good idea to clean the condenser coils by vacuuming them from outside the unit once every few months. Use the brush attachment with a vacuum cleaner.
- Note: Failure to keep air filter clean will result in poor air circulation. DO NOT operate without filter. This can render the unit inoperative.