

Cycle Name	Water Temp	Spin Speed	Soil Level	Drying	Extra Rinse	Cycle Time	Time Saver	Time Saver Time	Cycle Description
Normal / Cotton	Hot + Hot <b>Warm</b> Eco Cold	Highest <b>High</b> No Spin	Heavy Med <b>Light</b>	Heavy Normal Light <b>None</b>	Yes <b>No</b>	:54	Yes <b>No</b>	:42	Select this option for normally soiled cottons and mixed fabrics. Recommended fabric types - Cotton, jeans, linen, towels, shirts, sheets, etc.
Heavy Duty	Hot <b>Warm</b> Eco Cold	<b>Highest</b> High Medium Low No Spin	<b>Heavy</b> Med Light	Heavy Normal Light <b>None</b>	Yes <b>No</b>	1:34	Yes <b>No</b>	1:12	Select this option for heavily soiled items that require extra wash time.
Bulky	Hot Warm <b>Eco</b> Cold	Highest <b>High</b> Medium Low No Spin	<b>Heavy</b> Med Light			1:04	Yes <b>No</b>	:48	Select this option for larger items such as blankets and comforters. The washing period is longer for this cycle.
Sheets	Hot Warm Eco <b>Cold</b>	High <b>Medium</b> Low No Spin	Heavy Med <b>Light</b>			:57	Yes <b>No</b>	:52	Select this option for items such as bed sheets that are lightly soiled.
Active Wear	Hot Warm <b>Eco</b> Cold	Highest <b>High</b> Medium Low No Spin	<b>Heavy</b> Med Light	Heavy Normal Light <b>None</b>	Yes <b>No</b>	:51	Yes <b>No</b>	:38	Select this option clothing used for exercise or sports that have been heavily soiled.
Spin Only		Highest <b>High</b> Medium Low No Spin				:11			Select this option to spin a load separately from a regular cycle.
Rinse & Spin		Highest <b>High</b> Medium Low No Spin			<b>Yes</b> No	:16			Select this option to rinse and spin a load separately from a regular cycle. This can be helpful in preventing fresh stains from setting in fabrics.
Self Clean						1:27			Run the self-clean regularly to remove detergent buildup and other residue from wash drum. This setting will utilize extra high water temperature. * NOTE: Do not use this cycle with clothes, and do not add detergent or fabric softener.
Dry				Heavy <b>Normal</b> Light None		1:47			Select this option for a drying only cycle.
Tumble						:31			Select this cycle for items that are not soiled but can be freshened up with a short, warm air only cycle.
Permanent Press	Hot Warm Eco <b>Cold</b>	Highest <b>High</b> Medium Low No Spin	Heavy Med <b>Light</b>		Yes <b>No</b>	1:21	Yes <b>No</b>	1:00	Select this option for articles that have been treated with a chemical to reduce wrinkles that must be washed with less agitation. Recommended article types- Dress shirts/pants, wrinkle free clothing, poly/cotton blend clothing, table cloths, etc.
Hand Wash / Wool	Warm <b>Eco</b> Cold	High <b>Medium</b> Low No Spin	Heavy Med <b>Light</b>		Yes <b>No</b>	1:05	Yes <b>No</b>	1:01	Select this option to wash the wool textiles labeled with "Hand Wash" only. It is suggested to wash only small loads and with wool-safe detergent.
Sanitizize	<b>Hot +</b>		<b>Heavy</b> Med Light		Yes <b>No</b>	1:52			Select this cycle for items that require the hottest water setting.
Delicate	Warm <b>Eco</b> Cold	High <b>Medium</b> Low No Spin	<b>Heavy</b> Med Light		Yes <b>No</b>	:54	Yes <b>No</b>	:41	Select this option for fabrics/articles that are more delicate. Recommended fabric types - Dress shirts/blouses, nylons, sheer or lacy garments.
Quick Wash	Hot <b>Warm</b> Eco Cold	Highest <b>High</b> Medium Low No Spin	Heavy Med <b>Light</b>		Yes <b>No</b>	:36			Select this option for small wash loads that are lightly soiled.