

How do I reverse the door on my EdgeStar KC3000 Series Kegerator?

Models: BR3000SS, BR3000BL, BR3001SS, BR3001BL, BR3002SS, BR3002BL

NOTE: Empty contents of unit and disconnect from power source before attempting any repairs.

Tools Needed:

- Phillips Screwdriver
- Flathead Screwdriver


Step 1: Remove the lower hinge assembly

- Lay the unit on its back
- Remove the two front leveling legs (If the unit has casters installed you may have plenty of room to work without removing them)



Avallon

- With a Phillips screwdriver, remove the three screws securing the lower hinge to the door
- With a Phillips screwdriver, remove the two screws securing the limiting bracket to the door

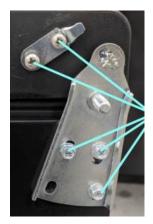

EDGESTAR


Koldfron

EdgeStar, 8606 Wall St, Suite 1600, Austin, TX 78754 support.edgestar.com • service@edgestar.com • edgestar.com

*Warranty service should be performed by an authorized service representative only.



• Slide the door down away from the upper hinge pin

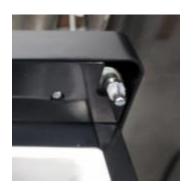

- With a flathead screwdriver, remove the upper hinge pin
- Install the upper hinge pin on the opposite side of the unit
- Slide the door up over the hinge pin
- With a Phillips screwdriver, reinstall three screws that attach the lower hinge to the door



• With a Phillips screwdriver, reinstall the two screws that attach the limiting bracket to the door




Koldfront

Avallon

EdgeStar, 8606 Wall St, Suite 1600, Austin, TX 78754 support.edgestar.com • service@edgestar.com • edgestar.com



Screw through the foam filled holes

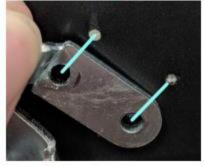

NOTE: The holes for the limiting bracket will be filled with foam. You can simply line the bracket up and screw the screws through the foam

• Reinstall the leveling legs

NOTE: After a refrigerator has been laid on its back you must allow it to sit upright for several hours to allow the refrigerant to settle back into the compressor

• Turn the unit upright and let it sit for 3-4 hours before plugging it back in

Avallon

Procedure Completed!



EdgeStar, 8606 Wall St, Suite 1600, Austin, TX 78754 support.edgestar.com • service@edgestar.com • edgestar.com